

ENG Programming Sender on the Receiver.

The following operations should be prepared before coding:

1. Disconnect the power supply of the receiver.
2. Remove the battery of the transmitter.

Coding operation steps are as follows:

Press and hold down the "up" button and "stop" button and fill the battery into the battery compartment of the transmitter, until the LED red light of the transmitter flashes rapidly. Then release the button.

When the receiver is connected to the power supply, the LED red light of the transmitter changes from fast flash to slow flash. At this time, the transmitter and receiver are in the state of code allocation.

If the transmitter encoding and channel number need to be sent to the receiver, the code allocation operation can be completed by pressing "UP".

To send the receiver code and channel number back to the transmitter, simply press the "DOWN" key to complete the coding operation. After successful coding, the LED green light of the emitter flashes once.

The sender has been equipped with a children safety function:

Press for 8 sec the green button.

Comply with EN-11492-2 standard and patent design